# **Installation Instructions**



Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

## ANTI-ROLL KIT- #5517.312

MAZDA, Miata, 90-93

Kit Contents	Description	Part Number	Qty	
REAR BAR	Rear Bar Hardware kit Bushing Lubricant	5517.320HA 5517.312HK UB0089 AR.LUBRICANT	1 2 1	
DOCUMENTS	Instructions Information Kit	5517.312INST EPAK	1	

## Preparing the vehicle for Anti-Roll Kit Installation

- 1. A technician, certified in the suspension work and/or familiar with your particular vehicle, should perform the Installation of this kit. A factory shop manual may be necessary for the installation of this kit.
- 2. Verify the individual Anti-Roll Bars and necessary hardware included in the *Eibach* Anti-Roll Kit is correct for your vehicle. Use the Bill of Materials Listing above to verify all hardware.
- 3. Raise the vehicle securely off the ground using a commercial car lift or jack stands.
- 4. Never work on/or under a vehicle that is solely supported only by a "JACK"!!
- 5. If necessary, remove the wheels from the axles for better access.

#### Rear Bar Installation

# Removing the factory Rear Anti-Roll Bar

- 1. Loosen and remove the end links from the anti-roll bar arms (both sides). Do not discard this hardware, as it will be needed to re-install the *Eibach* Anti-Roll Bar.
- 2. Loosen and remove the stock middle bushing brackets (both sides). Do not discard these brackets, as they will be needed to re-install the *Eibach* Anti-Roll Bar.
- 3. Remove the stock anti-roll bar.

# Installing the Eibach Rear Anti-Roll Bar

- 1. Lubricate the new *Eibach* middle bushings with the lubricant (supplied).
- 2. Position the new middle bushings on the *Eibach* Anti-Roll Bar in the same position as they were installed on the factory bar (both sides).
- 3. Align the middle bushings (both sides), install the factory brackets and tighten to the vehicle chassis.
- 1. Re-install the end links to the anti-roll bar arms (both sides). This particular bar is adjustable by changing between the inner and outer holes at the end of the bar.
  - For a SOFT characteristic, align the OUTER drill hole of the anti-roll bar to the end links and reinstall the factory nuts and bolts.
  - b. For STIFF characteristic, align the INNER drill hole of the anti-roll bar to the end links and re-install the factory nuts and bolts.
- 2. Tighten all nuts and bolts used in the installation of the anti-roll bar to the factory torque specifications.