

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

END LINK KIT # AK41-72-007-04-20

Kit Contents	Description	Part Number	Qty
	End Link	UEL14020802	2
	Instructions	AK41-72-007-04-20INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Installation of Eibach Adjustable front end links.

1. Begin by raising the vehicle and supporting it with the proper safety equipment, then, remove the front wheels. **Note: Never work on or under a vehicle that is not supported by the proper safety equipment.**



Photo 1



Photo 2

2. Loosen and remove the screws that secure the underbody cover as this will give you good clearance to access the lower end link hardware. (See Photos 1 & 2)



Photo 3

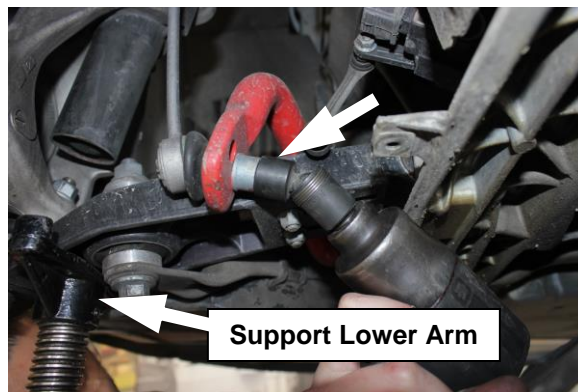


Photo 4



Photo 5

3. Make sure the lower control arm is supported by a floor or screw jack, then, loosen and remove the OE hardware that secures the OE end link to the end of the anti roll bar and the strut, then, remove the end link. (See Photos 3, 4 & 5)

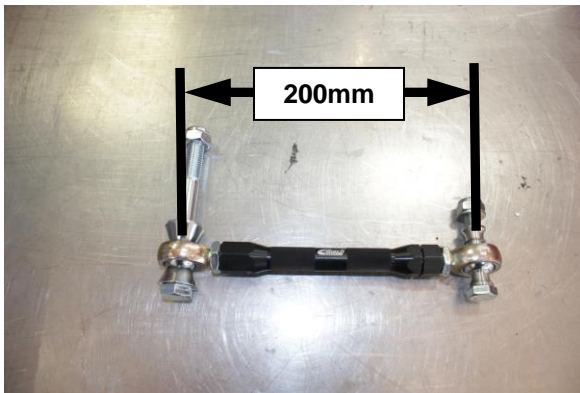


Photo 6

4. Adjust the Eibach end link to **200mm** from center to center as shown. (See Photo 6)



Photo 7



Photo 8



Photo 9

5. Install and secure the end link to the strut and the opposite end to the anti roll bar using the provided hardware as shown. (See Photos 7, 8 & 9)

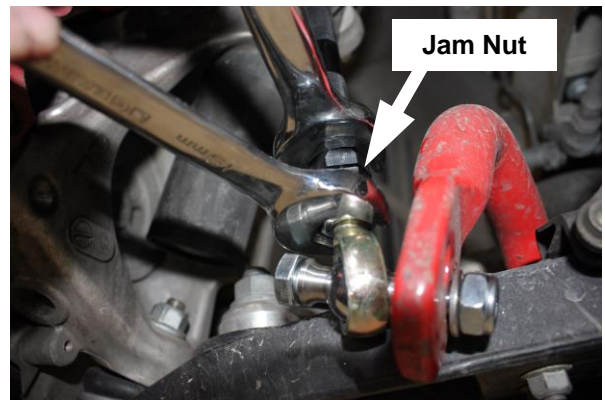


Photo 10

6. With the hardware properly secured, make sure the ends are properly orientated, then, tighten the upper and lower jam nuts. (See Photo 10)
7. Repeat this process on the other side.



8. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
9. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.