

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



Ford Focus Anti Roll Bar Kit - 3588.312

Read All Instructions Before Beginning Installation
Contents

Qty	Description	Qty	Description
1	Rear Bar	2	Rear End-Link Assemblies
2	Rear Urethane bushings	1	Urethane Lubricant
		1	Installation Instruction

1. Park vehicle on level surface and set emergency brake. Raise and support the vehicle with safety stands. Refer to factory manual for proper location of safety stands.
- **NOTE:** Never work on or under a vehicle unless it is properly supported by safety stands.

REAR BAR REMOVAL AND INSTALLATION

11. The rear bar can be installed with the vehicle on car ramps or when raised and placed on safety stands.
12. Remove both factory end-link assemblies.
13. Support the factory rear bar and remove the four bolts that attach the frame mount brackets to the chassis. Save the bolts and factory brackets for reuse later.
14. Apply the specially formulated urethane lubricant to the rear bushings. Install both bushings and the factory frame mount brackets on the bar.
15. Reusing the factory bolts, mount the rear bar to the chassis and tighten to factory specs.

16. Install the rear end-link assembly. See Illustration 5

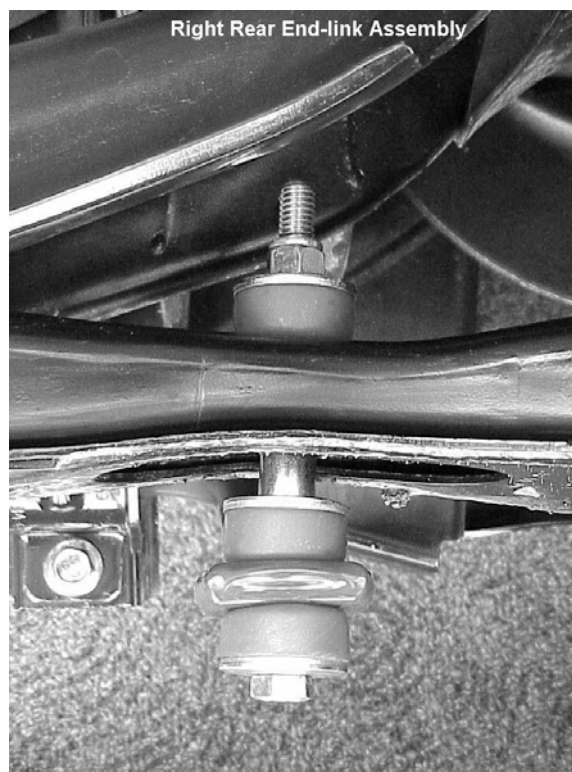


Illustration 5