

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

END LINK KIT # AK41-201-003-01-02

Kit Contents	Description	Part Number	Qty
	End Link	UEL06030202	2
	Instructions	AK41-201-003-01-02INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Installation of Eibach Adjustable rear end links.

1. Begin by raising the vehicle and supporting it with the proper safety equipment, then, remove the rear wheels. **Note: Never work on or under a vehicle that is not supported by the proper safety equipment.**

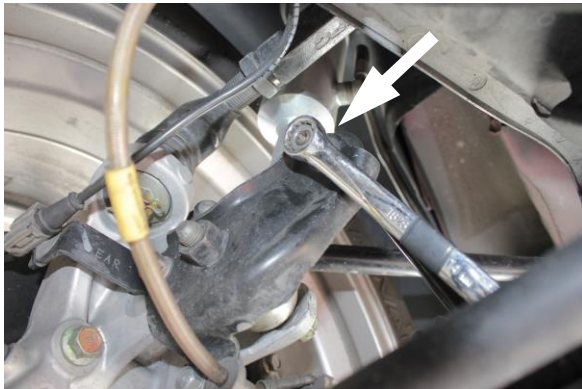


Photo 1



Photo 2



Photo 3

2. Loosen and remove the hardware that secures the OE end links to the bar and the knuckle, then, remove the end link. (See Photos 1, 2 & 3)

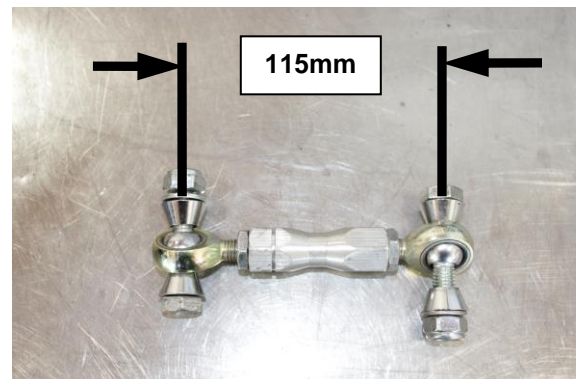


Photo 4

3. Adjust the Eibach end link to 115mm measuring from center to center as shown. (See Photo 4)



Photo 5

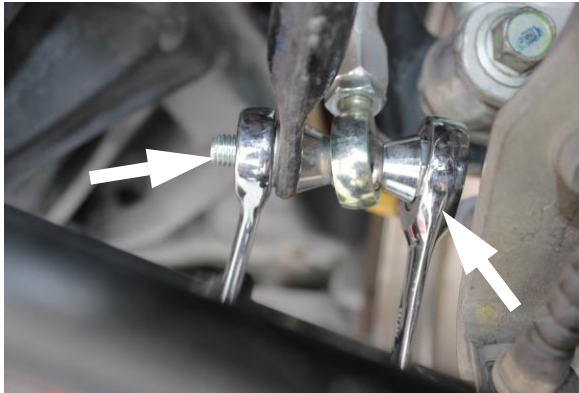


Photo 6

4. Install and secure the lower end of the link to the end of the anti roll bar as shown.. **(See Photos 5 & 6)**

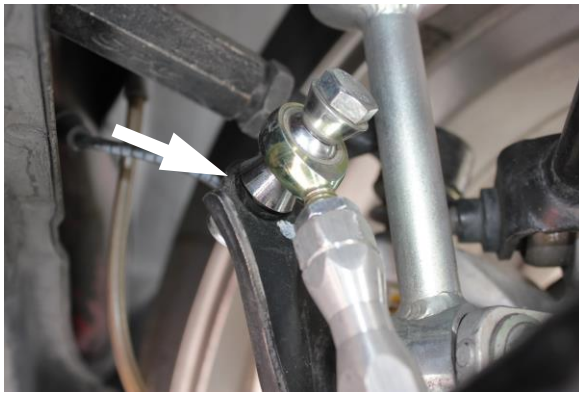


Photo 7



Photo 8

5. Secure the upper end of the link to the knuckle as shown. **(See Photos 7 & 8)**

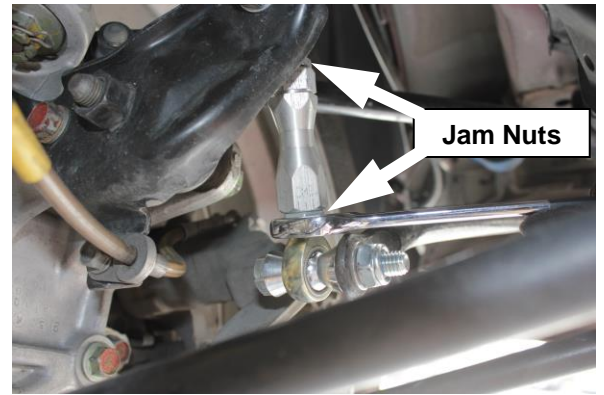


Photo 9

6. With the hardware properly secured, make sure the ends are properly orientated, then, tighten the jam nut as shown. **(See Photo 9)**
7. Repeat this procedure on the opposite side.
8. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
9. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.