

# Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

## Pro Truck Lift Kit – # E80-51-021-02-22

2016-2019 Jeep Grand Cherokee, 2WD/4WD, V6, w/Tow Package (Excluding SRT-8)

Kit Contents	Description	Part Number	Qty
	Front Damper, Right	E60-51-021-02-10	1
	Front Damper, Left	E60-51-021-03-10	1
	Rear Damper	28107.8002	2
	Front Spring	F31-51-021-01-FA	2
	Rear Spring	28108.602	2

### NOTES: Read All Instructions Before Beginning Installation

1. Park vehicle on level surface and set emergency brake. Raise and support the vehicle with safety stands. Refer to factory manual for proper location of safety stands.
2. Power washing your chassis will make the installation cleaner.
  - **NOTE:** Never work on or under a vehicle unless it is properly supported by safety stands.
3. Follow the manufacturers recommended procedure for removal and installation of the front and rear dampers.

#### Front Spring Perch Installation (V8 only)

Remove the OE spring perch from the OE strut and install it onto the Eibach Pro Damper. **Note: The provided spacer is for use on V8 equipped vehicles only. (See Photos 1, 2 & 3)**



Photo 1

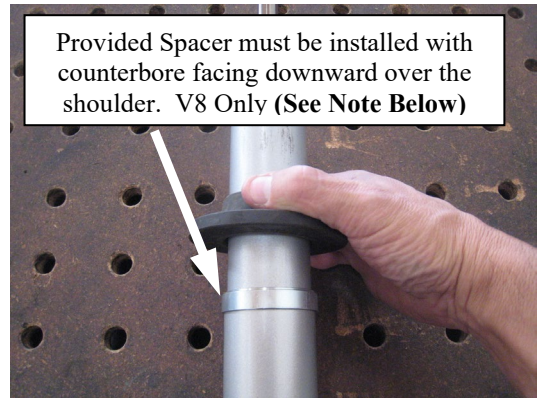


Photo 2

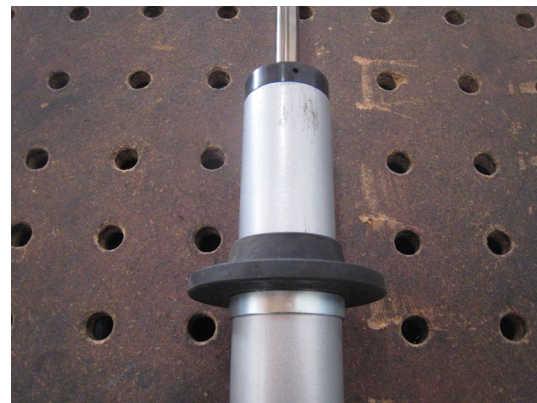


Photo 3

**Note: The Spacer must be installed with the counterbore facing downward over the shoulder**

Improper installation will cause permanent damage to the shock. (See Photo 2)

### Front Spring Perch Installation (V6 only)

Remove the provided spacer from the Eibach Pro Damper, then, install the OE spring perch onto the Pro Damper as shown. **Note: The provided spacer must be removed for use on V6 equipped vehicles.** (See Photos 4, 5 & 6)

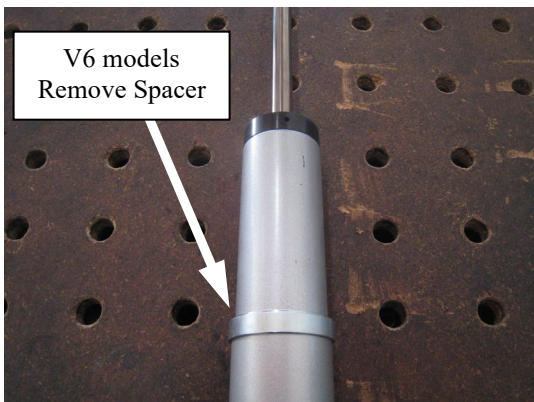


Photo 4



Photo 5

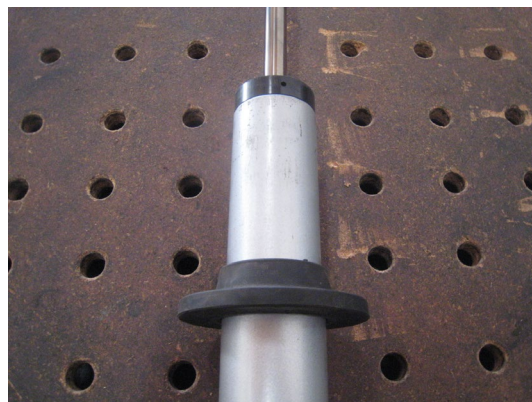


Photo 6