

Installation Instructions

Eibach Inc. .264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



E40-35-54-01-01

Vehicle 2021+ Ford Mustang Mach-E

Notes This is an electric vehicle that uses a high voltage system. When working on this vehicle it is highly recommended that the proper personal protective equipment is used. Failure to do so may result in injury or death.

Kit Contents	<u>Description</u>	<u>Part Number</u>	<u>Quantity</u>
	Rear Anti Roll Bar	AS41-35-054-01-RA	1
	Sway Bar Bushing	ES5340.01	2
	Sway Bar Bracket	UB0020	2
	Zerk Fitting	H58041562	2
	Bushing Lubricant	AR.LUBRICANT	1


Installation Notes

Read all instructions before beginning installation


- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- All Eibach springs should be installed with the Eibach logo right-side-up.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.




1. Safely lift and secure vehicle. Remove the bolts that secure the rear under tray.

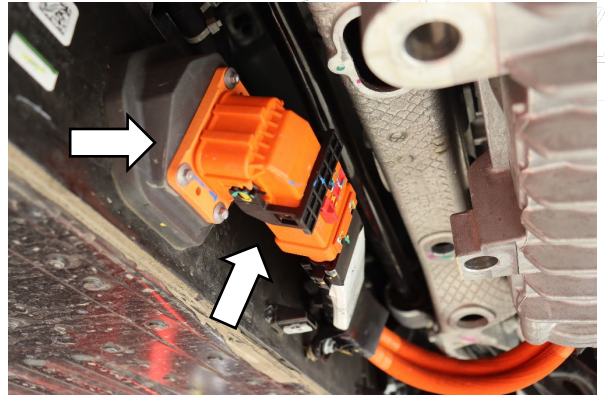

2. **WARNING:** This orange wire is directly connected to the high voltage battery. Make sure that you are using the proper Personal Protective Equipment when servicing this vehicle. Failure to do so may result in injury or death.

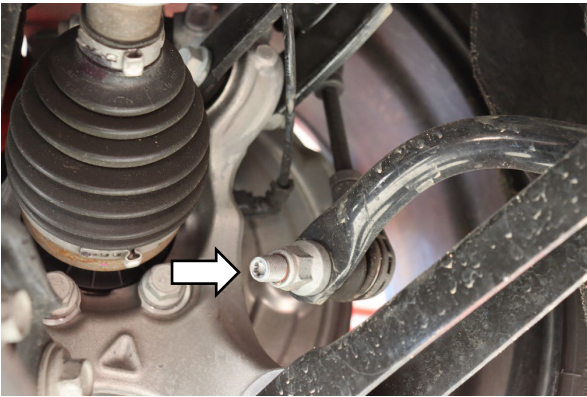

3. Remove the end links with an 18mm socket.

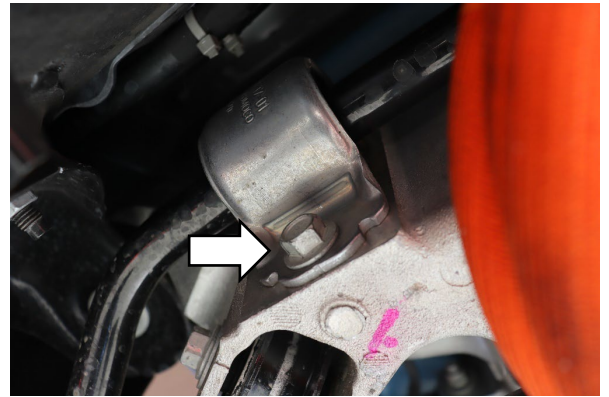


4. Remove the bolts for the sway bar bracket with a 15mm socket.




5. Remove the sway bar




6. Lubricate the provided bushings

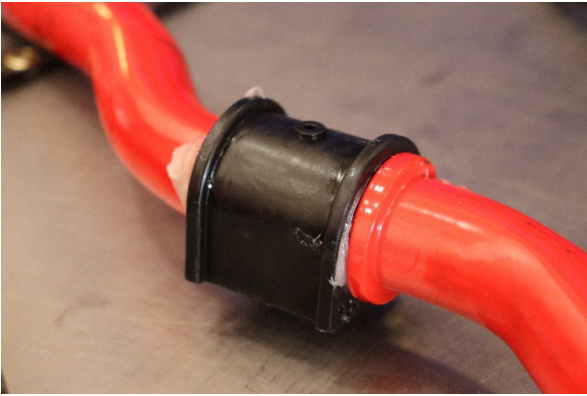


7. Install the bushing onto the sway bar on the outside of the rings.

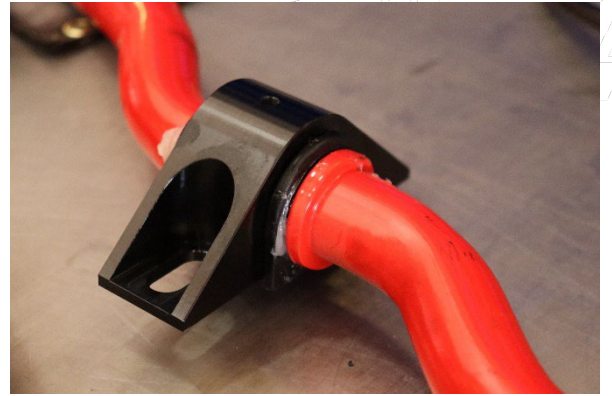

8. Install the provided bracket onto the bushing.

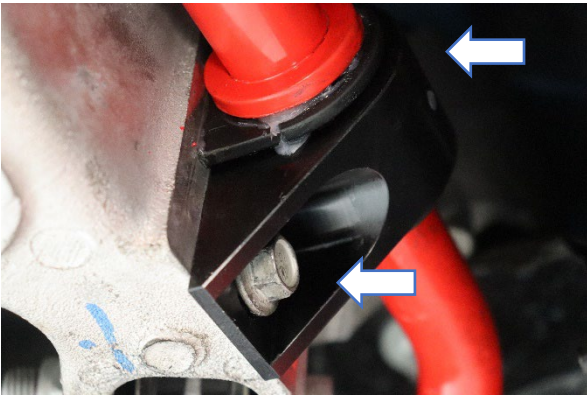

9. Install the sway bar with the OE 15 mm bolts using a deep socket.

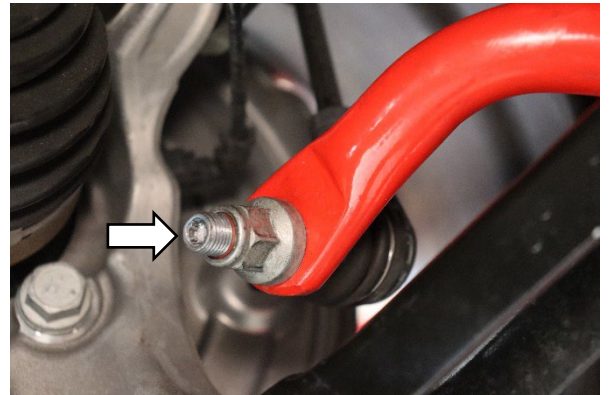

10. Reinstall the OE end links using an 18mm wrench. Double check that all bolts are tightened properly.



11. Reinstall the OE plastic cover and then road test the vehicle.