



Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

PRO-LIFT # E30-59-005-01-20

2003-2009 Lexus GX470

Note: The Pro Truck Leveling springs must not be used with the OE shocks. Extended travel shocks are required to avoid damage to the suspension.

Note: Please refer to the instructions on the following page for proper spring fitment when using the Eibach Pro Sport Truck Dampers

| Kit Contents | Description | Part Number | Qty |
|--------------|--------------|----------------------|-----|
| | Front Spring | F31-59-005-01-FA | 2 |
| | Instructions | E30-59-005-01-20INST | 1 |


NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and piston rod nuts.
- **PRO-LIFT** springs should be installed with the Eibach Logo right side up. All original stock spring isolators, and tubing should be retained from the stock springs and used when installing the **PRO-LIFT** Springs.
- After installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe
 - Tire and/or wheel fender clearance, when aftermarket tires and wheels are used.
 - Brake line clearance and attachments
 - Brake anti-locking and anti-skid system sensors

Additional Eibach Components Available For Your Truck

| Eibach Kits | Part Number | Description | Front | Rear |
|---|------------------|----------------------|---------|------|
| Pro Truck Sport Leveling front dampers | E60-59-005-01-10 | Off-Road Performance | +0-2.5" | N/A |
| Pro Truck Sport Leveling rear dampers | E60-82-008-02-01 | Off-Road Performance | N/A | 0-1" |

Spring Seat Fitting Instructions for Eibach Pro Sport Truck Dampers

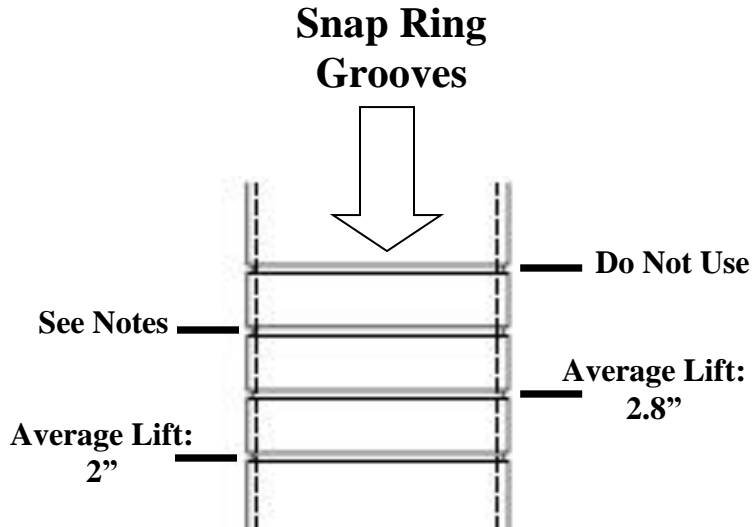

Important: Ensure that the snap ring is fully seated in the snap ring groove (you should be able to rotate the snap ring manually/by hand). **Note: Improper installation will cause permanent damage to the shock. Please refer to the Pro Truck Sport Damper instructions for more info regarding proper installation and fitment.**

Notes:

- Do Not use the top groove in conjunction with the Eibach Pro Lift Spring. Doing so will cause damage to the suspension and a possible loss of control of vehicle.
- The 2nd and 3rd snap ring grooves are to be used to accommodate extra weight, such as heavy duty bumper, winch, and other miscellaneous modifications that may contribute to a lower overall ride height.
- Use of the 2nd and 3rd grooves to get more than 2" of lift on a stock vehicle may cause a degradation of ride quality.
- Average lift measurements shown are for Pro Truck Sport Dampers when used in conjunction with Eibach Pro Lift Springs. The lift amounts are based on a stock vehicle with no added aftermarket accessories or additional weight.