

# Installation Instructions

Eibach Springs, Inc. 264 Mariah Circle Corona, California 92879-1751 USA- Tech Support 800-222-8811 Ext 114



## PRO-KIT - # 3897.140

## PONTIAC - GTO, 2004

Kit Contents	Description	Part Number	Qty
	Front Spring	3897.001	2
	Rear Spring	3897.002	2
	Information Kit	EPAK	1
	Instructions	3897.140INST	1


### NOTES: **Read All Instructions Before Beginning Installation**

- Installation of a **PRO-KIT** Spring set should only be performed by a qualified mechanic experienced in the installation and removal of suspension springs.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- **PRO-KIT** Springs are marked with 01 and 02 (located at the end of the part number) designating front and rear spring respectively.
- **PRO-KIT** Springs should be installed with the **Eibach** Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and reused
- **After** installation, it is always important to inspect and adjust the following if necessary:
  - Wheel alignment such as camber, caster & toe
  - Tire and/or wheel fender clearance
  - Brake line clearance and attachments
  - Brake anti-locking and anti-skid system sensors
- **Tire Rotation:** To increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.
- **Alignment:** After installation, it will be necessary to perform a full vehicle alignment using factory specifications

### Bumpstop Instructions:

1. No rear bumpstop modification is needed.
2. Remove the OE front bumpstop during the spring installation.
3. Trim 14mm off of the **top** of the front bumpstop and discard.
4. **Photo 1** shows the front bumpstop *before* trimming.
5. **Photo 2** shows the front bumpstop *after* trimming.
6. Install remaining bottom portion as shown in **Photo 2**

(Photo 1)

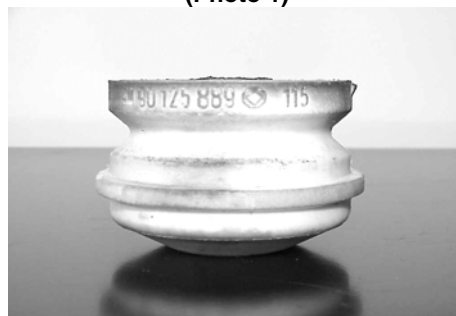

(Photo 2)

