

Installation Instructions

Eibach Springs, Inc. • 246 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114



Anti-Roll-Kit # 7713.310

Subaru, WRX STi , 2004 - 2007

Kit Contents	Description	Part Number	Qty
	Front Bar	7713.320F	1
	Anti-Roll Hardware Kit	7713.310HK	1
	Bushing	5664R	2
	Information Kit	EPAK	1
	Instructions	7713.310INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Installation time: Is approximate 2 hours with the use of a hoist.
- Never work on or under a vehicle unless it is properly supported.
- Tire Rotation: In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

Additional Eibach Components Available For Your Car

Eibach Kits	Part Number	Description	Front	Rear
Pro-Kit	7713.140	High Performance Handling	1.0 In.	.8 In.

FACTORY FRONT BAR REMOVAL

1. With the vehicle safely supported, remove all 4 wheels.
2. You will need to remove the plastic under body splash shield. **(See Photo 1)**
3. Remove the lower sub frame from the car. **(See Photo 2)**
(Note: Two of the bolts are hidden under plastic shields.)



Photo 1



Photo 2

4. Remove the small belly plate directly below the center of the bar. **(See Photo 3)**

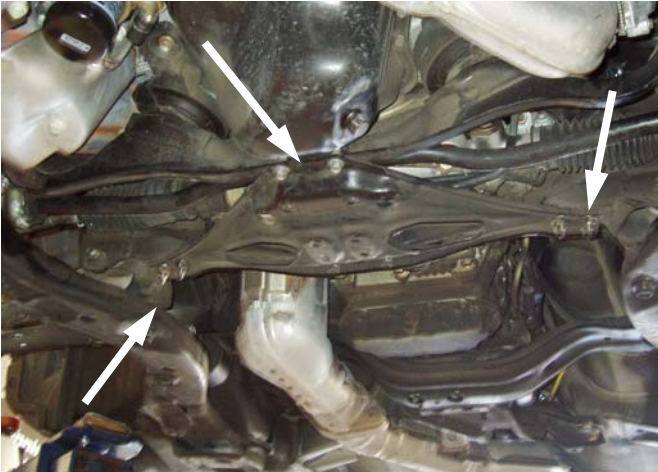


Photo 3

5. Disconnect the front end links from the sway bar and from the lower control arms. **(See Photo 4)**



Photo 4

6. Disconnect front center frame mount bushing brackets. **(See Photo 5)** ***(Note orientation of bracket and bar before removing the bar.)***



Photo 5

7. Remove sway bar from the vehicle.

EIBACH FRONT BAR INSTALLATION

1. Apply supplied lubricant to new sway bar bushings.
2. Install new Eibach sway bar in reverse order of removal.