

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

Anti-Roll-Kit # 4040.312

Honda Accord 1998-2002 All Models.

Kit Contents	Description	Part Number	Qty
	Rear Bar	4040.320R	1
	Anti-Roll Hardware Kit	4040.312HK	1
	Instructions	4040.312INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- **Installation time:** Is approximate 3 hours with the use of a hoist.
- **Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.**
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

Additional Eibach Components Available For Your Car

Eibach Kits	Part Number	Description	Front	Rear
<i>Pro-Kit</i>	4040.140	High Performance Handling 1998-2002 Accord 4 Cyl	1.5 In.	1.5 In.
	4041.140	1998-2002 Accord 6 Cyl	1.5 In.	1.5 In.
		Extreme Performance		
<i>SportLine</i>	4.4040	1998-2002 Accord 4 Cyl. Models.	2.0 In.	2.0In.
	4.4140	1998-2002 Accord 6 Cyl. Models.	2.0 In.	2.0In.
<i>Alignment Kit</i>	5.67090K	Rear camber.		-2.0/+4.0 Degrees



Equipped with Eibach Pro-Kit

FACTORY REAR BAR REMOVAL

1. Locate and remove your OE end links. They are fastened both to the anti-roll bar and the lower shock mount bracket with 14mm nuts. See photo3.

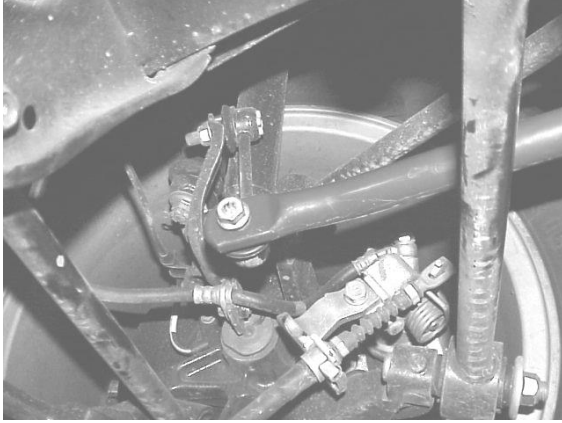


Photo 3

4 CYL. Skip the next step

1. On most 6 cylinder models you will need to lower the rear dual exhaust section. Be sure to support the exhaust system with a jack. To do this you will need to pry both rubber hangers off of both muffler hangers. see photo 4. We recommend spraying lubricant on the rubber to ease removal of the hangers. With the mufflers detached from the hangers you can lower the exhaust. The exhaust only needs to drop around 2" to allow the rear anti-roll bar to be removed easily.

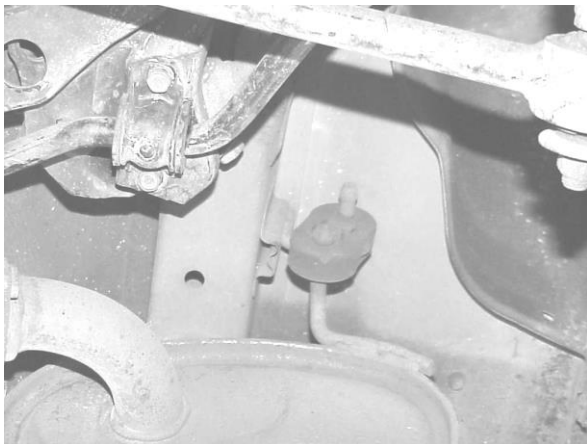


Photo 4

2. Locate the anti-roll bar bushing brackets. Remove the four 12mm bolts which are fastening the brackets to the sub frame. Now remove the black rubber anti roll bar bushings. See photo 5.
3. You can now maneuver the OE anti-roll bar from vehicle.

EIBACH REAR BAR INSTALLATION

1. Locate your new Eibach Anti-Roll bar along with its corresponding bushings and brackets.

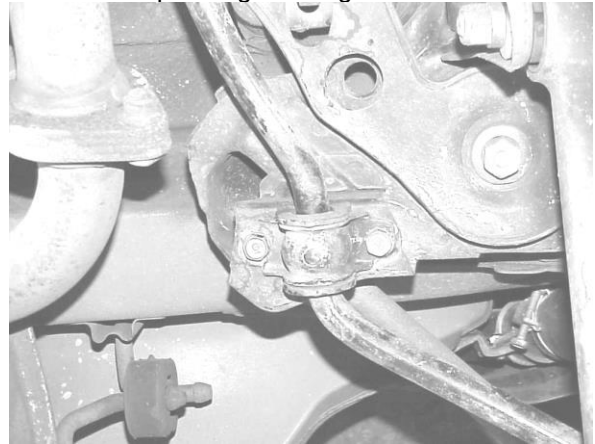


Photo 5

2. Apply the supplied anti-roll bar lubricant to the inside of the anti roll bar bushings.

NOTE: DO NOT apply lubricant between the bushings and bracket.

3. Install your new Eibach Anti-Roll bar in your vehicle in the reverse order of the OE anti-roll bar removal using your new bushing brackets. Note for future cleanliness of the bushings, we recommend installing the rear bushings with the cut in the bushing facing the rear of the vehicle.

