

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

END LINK KIT # AK41-40-036-04-RA

Kit Contents	Description	Part Number	Qty
	End Link	UEL00030205	2
	Instructions	AK41-40-036-04-RAINST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Installation of Eibach Adjustable rear end links.

1. Begin by raising the vehicle and supporting it with the proper safety equipment, then, remove the front wheels. **Note: Never work on or under a vehicle that is not supported by the proper safety equipment.**
2. Remove the OE end links from the vehicle.

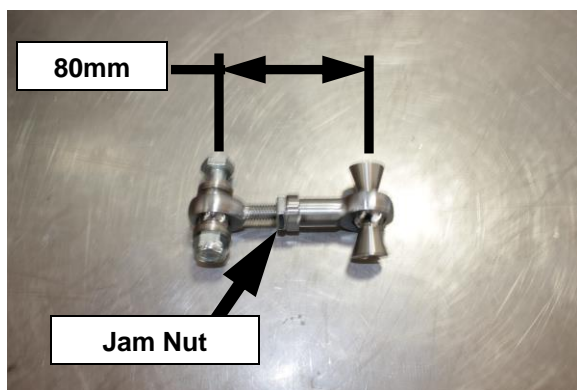


Photo 1

3. Adjust the Eibach end links to **80mm** from center to center as shown and tighten the jam nut. (See Photo 1)

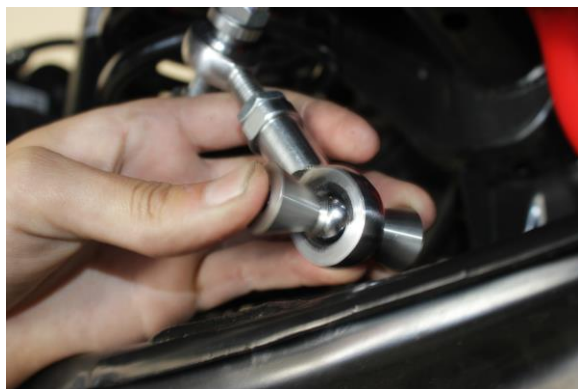


Photo 2



Photo 3



Photo 4

4. Install and secure the Eibach end link to the lower control arm using the OE hardware. (See Photos 2, 3 & 4)



Photo 5

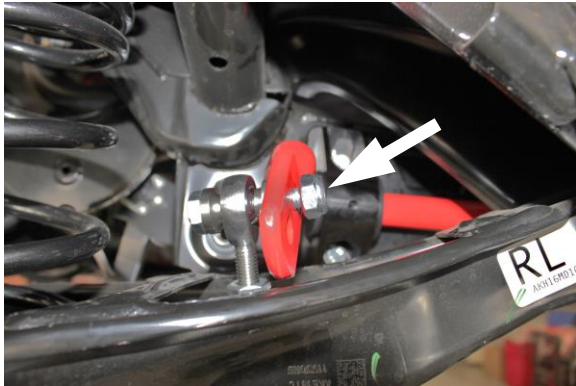


Photo 6



Photo 7

5. Secure the opposite end of the Eibach end link to the anti roll bar and secure it with the provided hardware as shown. **(See Photos 5, 6 & 7)**
6. Repeat this procedure on the opposite side.
7. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
8. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.