

# Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

## Rear End Link Kit # AK41-209-002-01-01

Kit Contents	Description	Part Number	Qty
	End Link	UEL13010303	2
	Instructions	AK41-209-002-01-01INST	1

### NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

### Installation of Eibach Adjustable Rear end Links

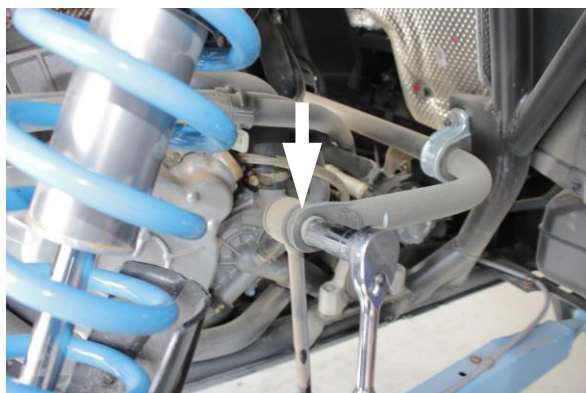


Photo 1



Photo 2

1. Loosen and remove the hardware that secures the end link to the ends of the OE anti roll bar and the control arm, then, remove the end link. (See Photos 1 & 2)

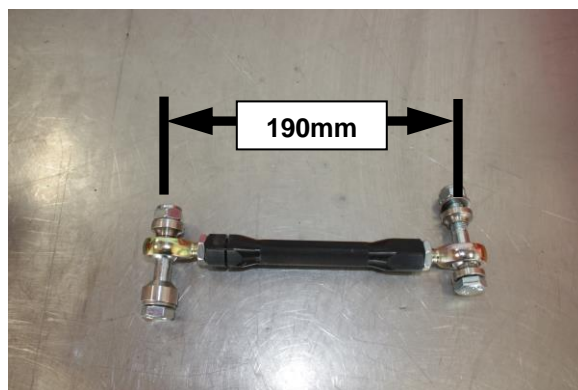


Photo 3

2. Adjust the Eibach end links to 190mm from center to center as shown. (See Photo 3)

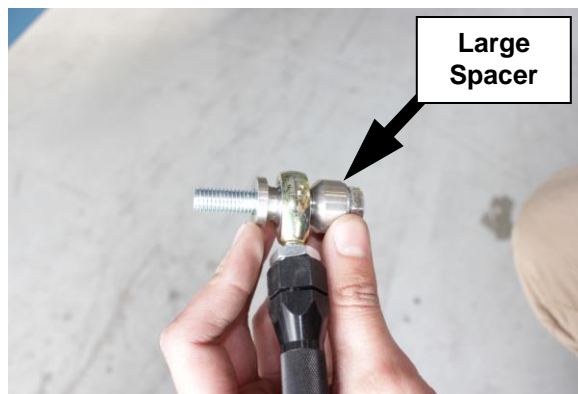
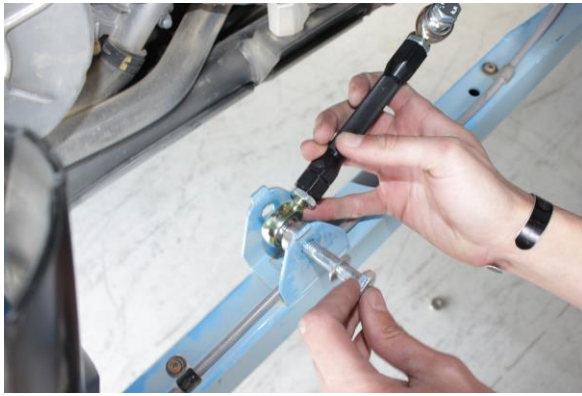
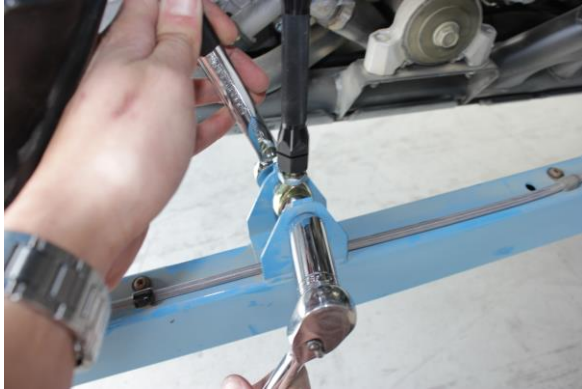


Photo 4

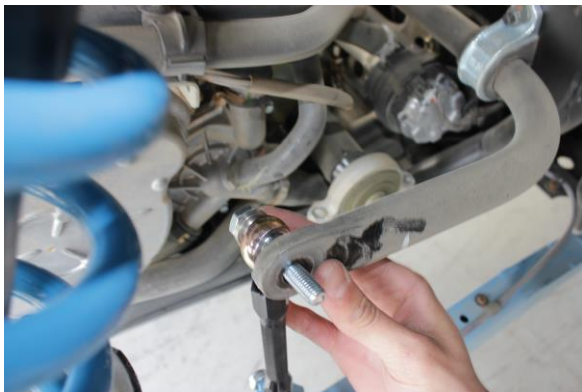


**Photo 5**

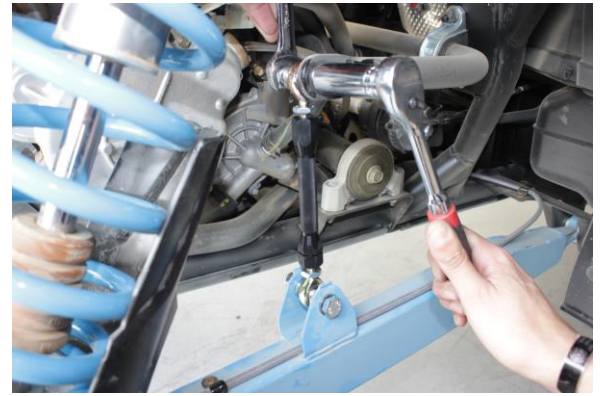


**Photo 6**

3. Install and secure the end link to the lower control arm using the provided hardware as shown. **Note: The large spacer shown in Photo 4 should be located towards the outside of the control arm. (See Photos 4, 5 & 6)**



**Photo 7**



**Photo 8**

4. Connect the other end to the anti roll bar using the provided hardware as shown. **(See Photos 7 & 8)**



**Photo 9**

5. Make sure the ends are properly orientated, then tighten the jam nuts as shown. **(See Photo 9)**
6. Repeat this procedure on the opposite side.
7. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
8. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.