

# Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

## Front End Link Kit # AK41-209-004-02-10

Kit Contents	Description	Part Number	Qty
	End Link	UEL08010303	2
	Instructions	AK41-209-004-02-10INST	1

### NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

### Installation of Eibach Adjustable Front End Links



Photo 1



Photo 2

1. Loosen and remove the hardware that secures the end link to the ends of the OE anti roll bar and the control arm, then, remove the end links from both ends of the OE bar. (See Photos 1 & 2)

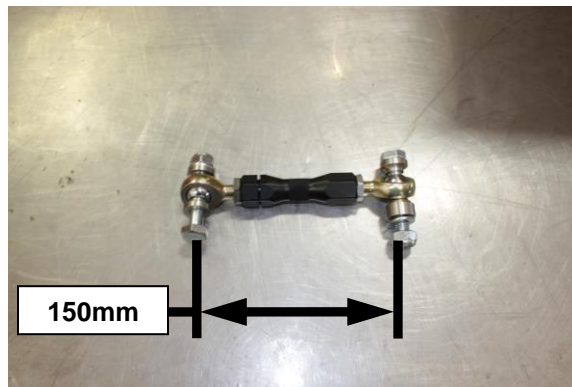


Photo 3

2. Adjust the Eibach end links to 150mm from center to center as shown. (See Photo 3)

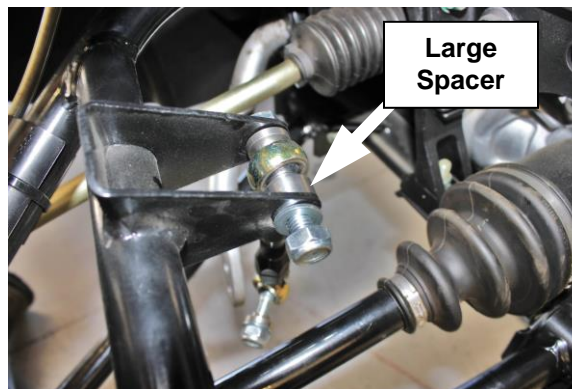
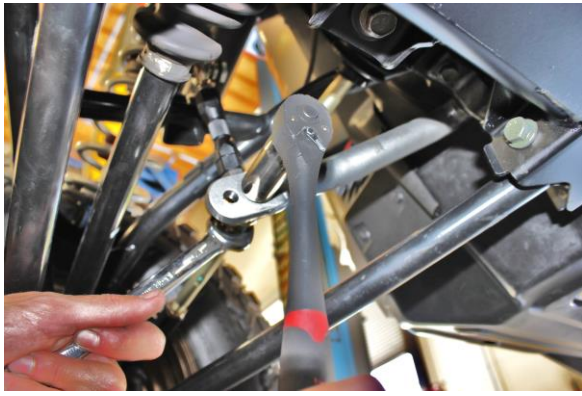


Photo 4



**Photo 5**

3. Install and secure the endlinks using the provided hardware as shown. **Note: The large spacer shown in Photo 4 should be located towards the front of the control arm. (See Photos 4 & 5)**



**Photo 6**

4. Make sure the ends are properly orientated, then tighten the jam nuts as shown. **(See Photo 6)**
5. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
6. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.